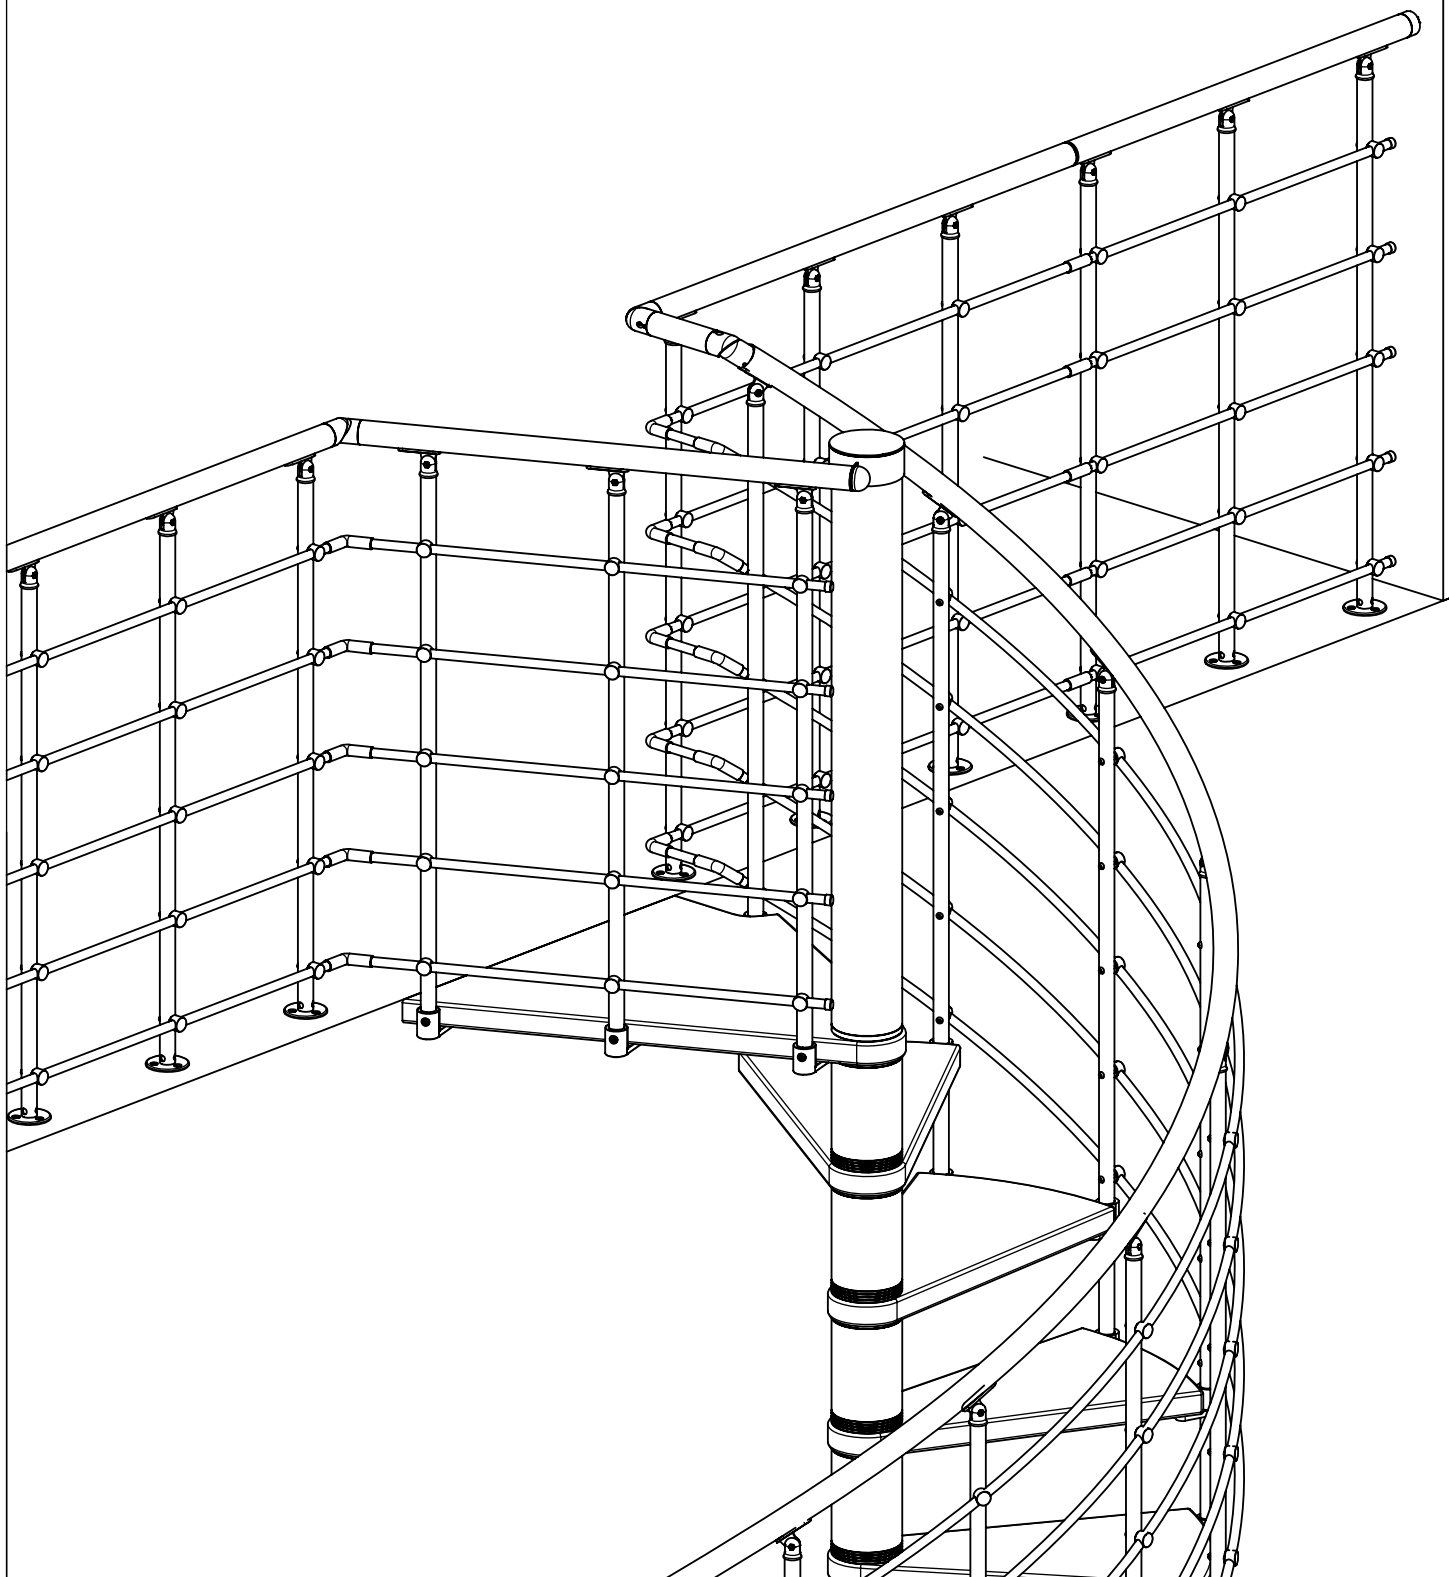
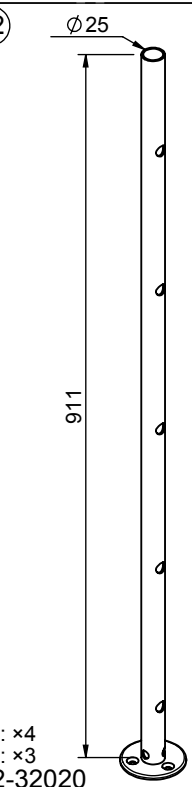








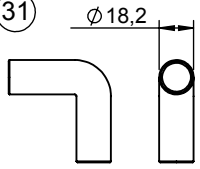
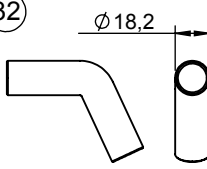











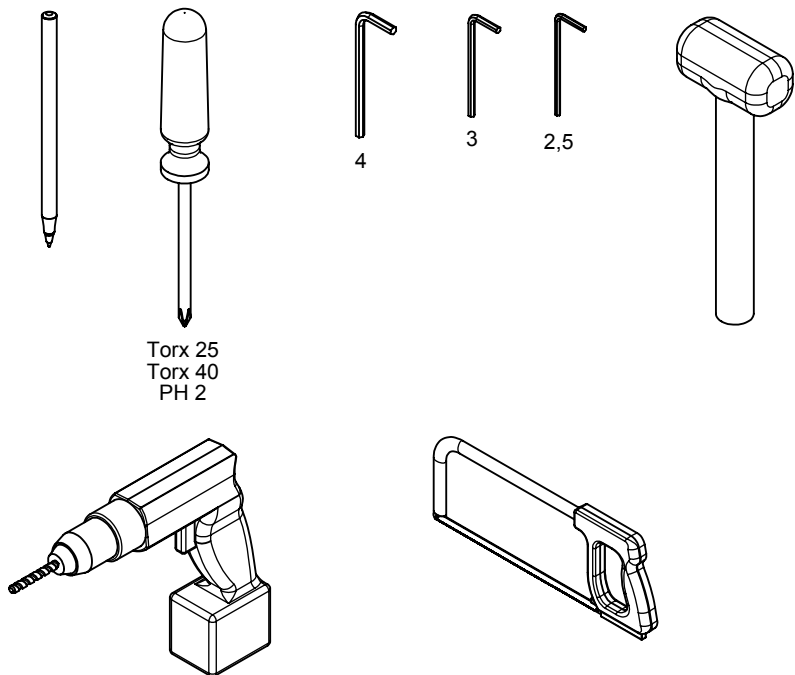
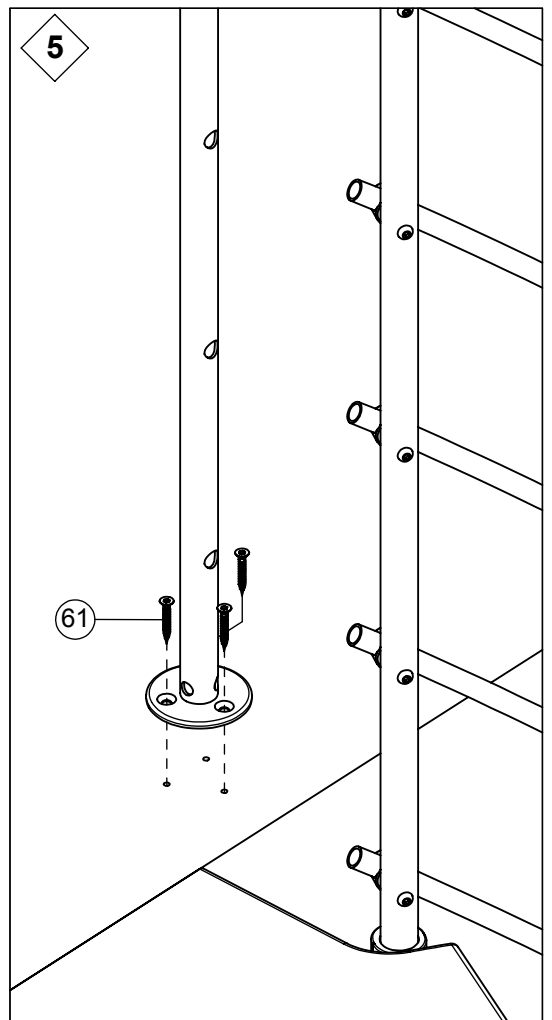
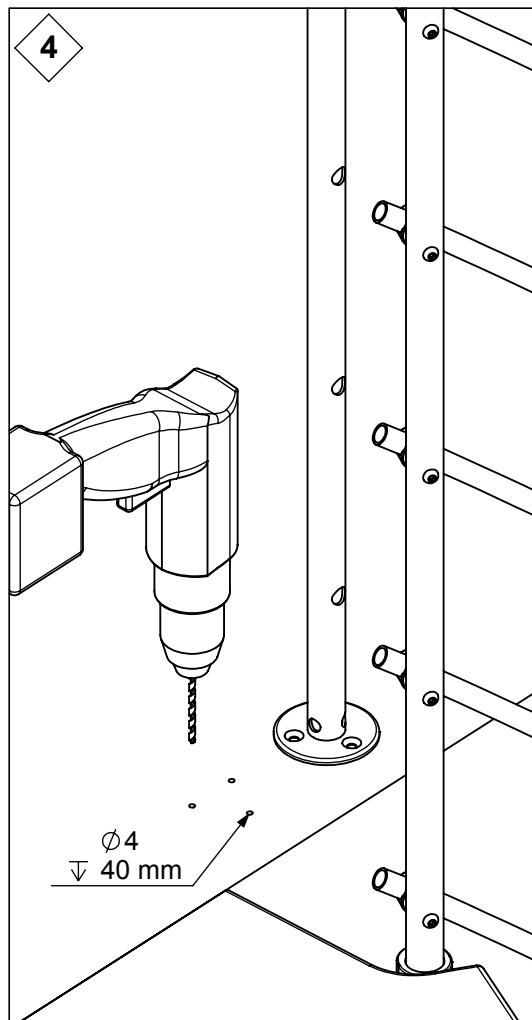
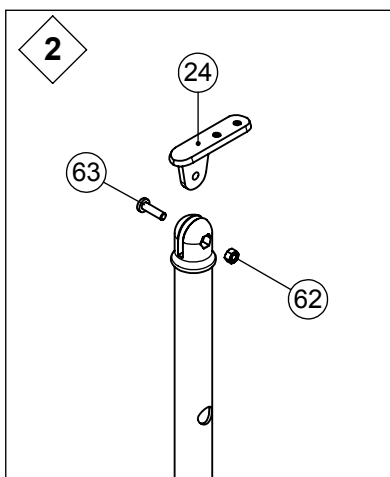
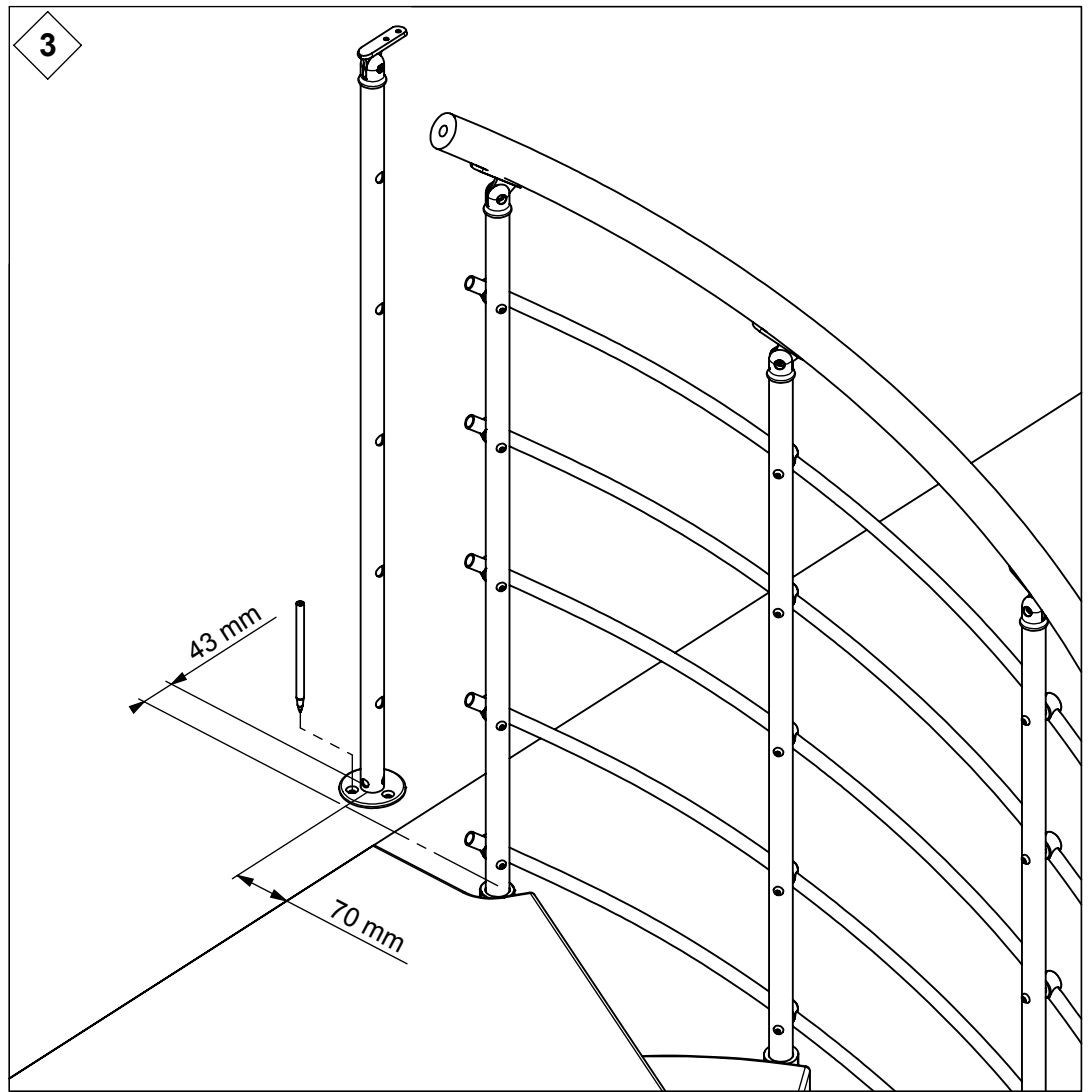
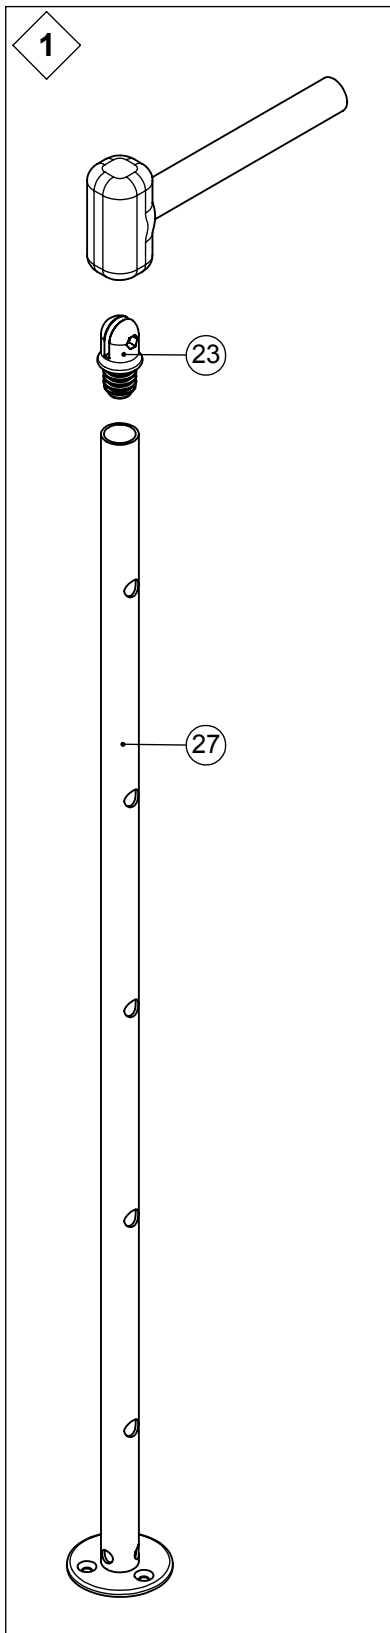


DOLLE


Einbauanleitung - Brüstungsgeländer - Oslo weiß
Mounting Instructions Balcony Banister - Oslo grey
Instructions de Montage de Balustrade - Oslo gris




	(I) Start kit (II) Extension kit	Kit de départ Kit de suite	Startpaket Extrapaket	Startpakke Ekstrapakke	
22  (I): x4 (II): x3 K2-32020	23  (I): x4 (II): x3 K1-32026	24  (I): x4 (II): x3 K1-32025	25  (I): x20 (II): x15 K1-32075	26  (II): x1 K1-32100	27  (I): x2 K2-32040
	28  (I): x5 (II): x5 K1-32072				
	29  (I): x1 K2-32521				
	30  (II): x1 K2-32522				
31  (I): x5 K1-32094	32  (I): x5 K1-32092	34  (I): x5 K1-32070	36  (II): x5 K1-32090	37  (I): x1 K2-32055	38  (II): x1 K1-32630
42  (I): x1 K3-90001	59  (I): x20 (II): x15 K3-10250 M6x16	60  (I): x4 R1-63616	61  (I): x21 (II): x15 K3-10125 Ø5x35	62  (I): x4 (II): x3 K3-10025 M5	63  (I): x4 (II): x3 K3-10000 M5x18
64  (I): x20 (II): x15 K3-10200	 Torx 25 Torx 40 PH 2				



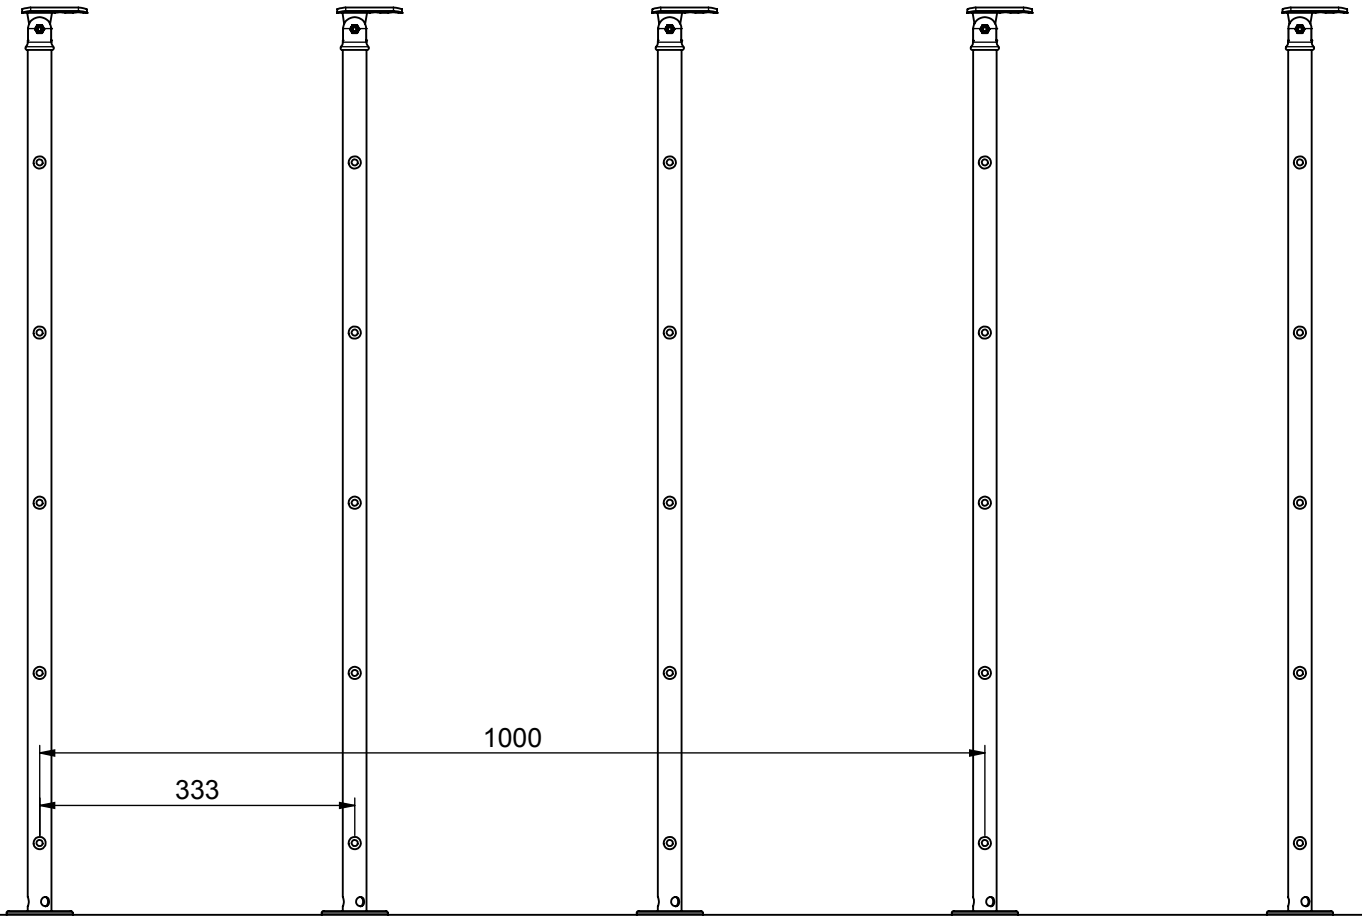
6



7

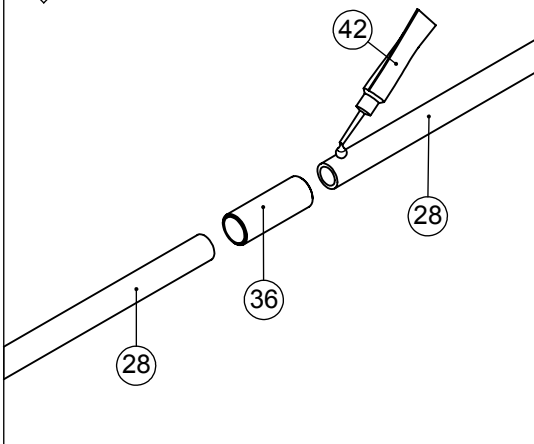

9

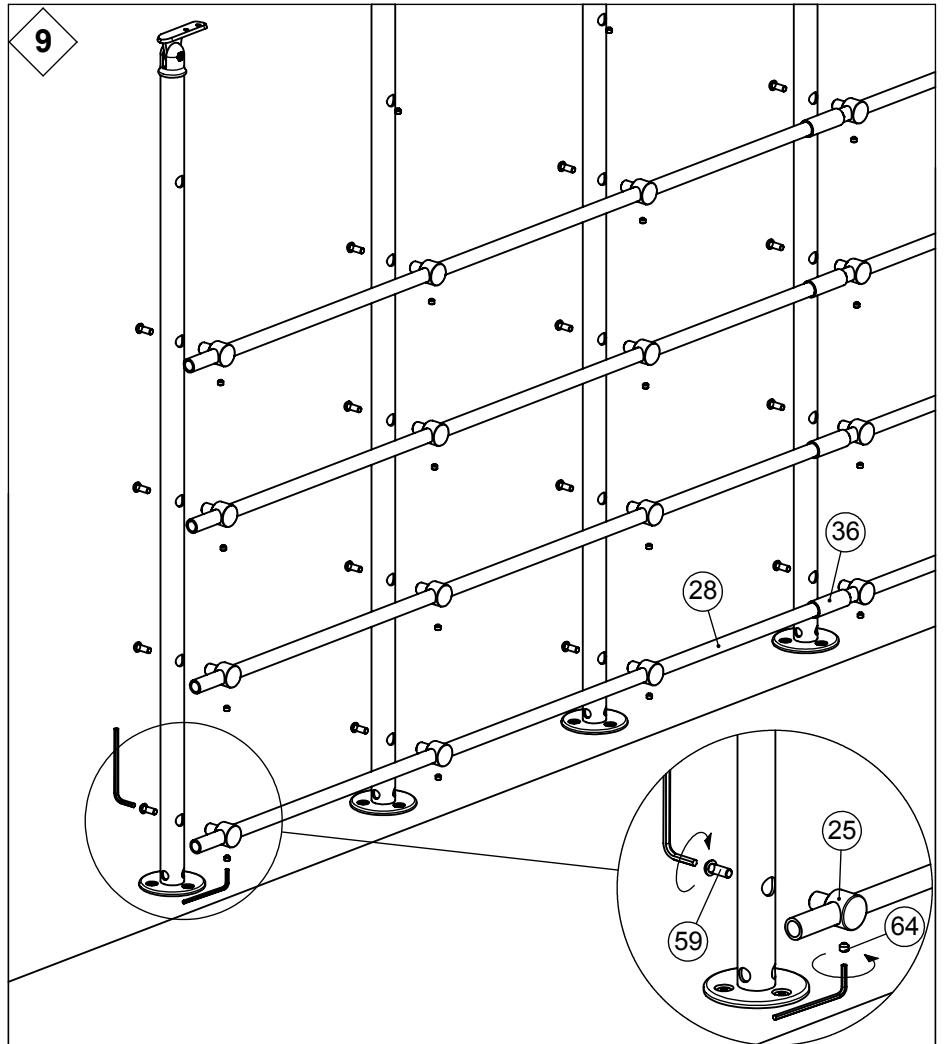

8

